

Jaw Installation Instructions

Adjustable CPU cradle

JAW™
CPU-013

MAX
25kg/55.1lb

List of parts:
 JAW CPU holder
 M6 bolt
 shoulder washer
 plastic washer (black)
 clamping disc
 M6 Nyloc nut
 rubber pad
 short allen key

510
290
(mm)
Min/Max
CPU Dimensions
90 240

Mounting options

CPU holder mounting with rotating function
UNI/ROT

CPU holder fixing Slide & Rotate
UNI/SR350

CPU holder fixing Slide & Rotate
UNI/SR520

plastic slider stop
slider
rail
washer
screw
rubber stoppers

M8 nyloc nut*
nylon washer*
washer*
bolt*


IMPORTANT
Parts marked (*) not required for JAW installation. Use fixings supplied with JAW - as described below

Assemble the JAW

Fit the slider plate


1-1 Insert nyloc nut into clamping disc. It should 'snap' into place.

1-2 Fit the slider plate. If necessary, adjust upper and lower clamp pads to hold CPU centrally.

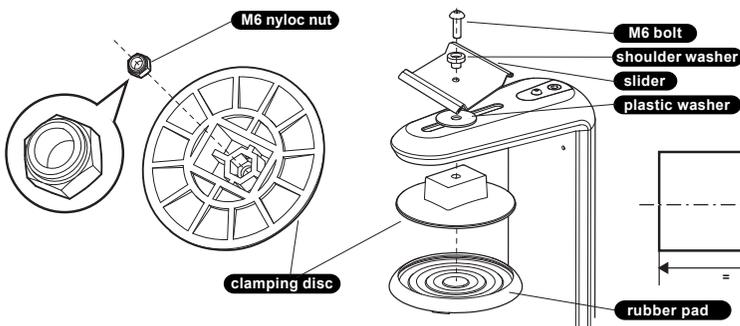

Fix your CPU

2 Unwind JAW to open up then tighten on CPU using allen key supplied.

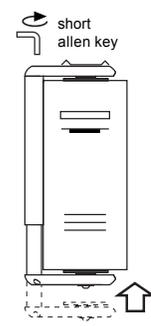


NOTE
The use of excessive force when tightening may result in the damage of your CPU
Recommended tightening torque 1.5Nm to 2.5Nm

Mount to furniture


Preparation

3 Make sure the CPU has enough space to rotate if required.

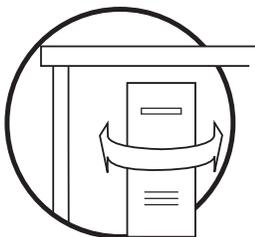


Mounting the bracket to the underside of the desk

4 Screw your chosen mount rail securely to the underside of the desk using screws provided.

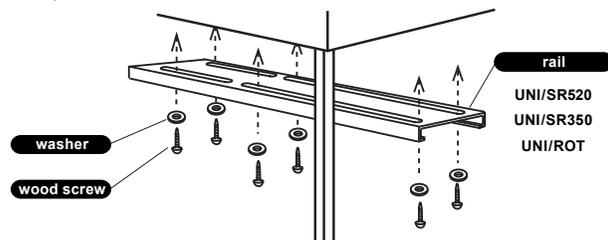

Insert the JAW

5 Slide the JAW into the rails then insert the plastic slider stop.

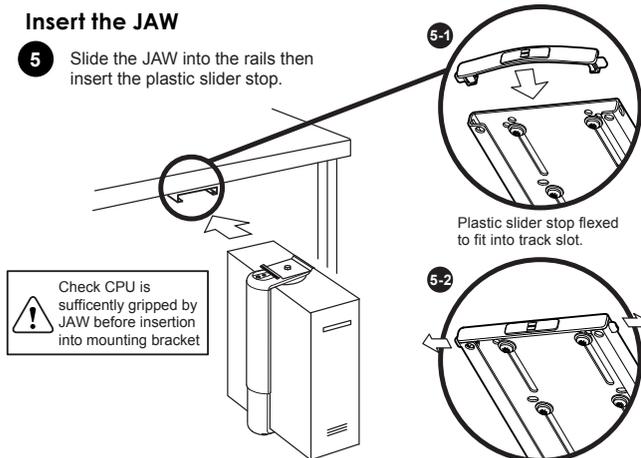

WARNING

- Ensure desk is suitable to take the weight of the CPU holder and CPU.
- Do not use this product for any purpose other than that for which it was designed.
- Hold the CPU tightly when making adjustments.
- Care should be taken to avoid trapping fingers.
- Do not dismantle or modify the CPU cradle.
- Supported weight must not exceed 25kg (55lb) per cradle.



MAINTENANCE and INSPECTION

- Ensure all screws are tightened and occasionally adjust if needed.
- Clean with a damp cloth, NO solvents.

DISCLAIMERS

- The use of power tools, lever bars or excessive force during the installation, or reconfiguration of the product will invalidate your guarantee.
- Failure to observe the recommendations in the use, and configuration of these products may affect your guarantee.

www.colebrookbossonsaunders.com

AUG 2009

JAW-CPU-013-INST-H