



# Niila

Flicker-Free  
LED Lamp

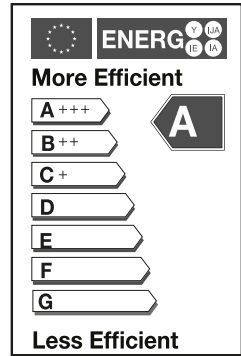

## PRODUCT DESCRIPTION

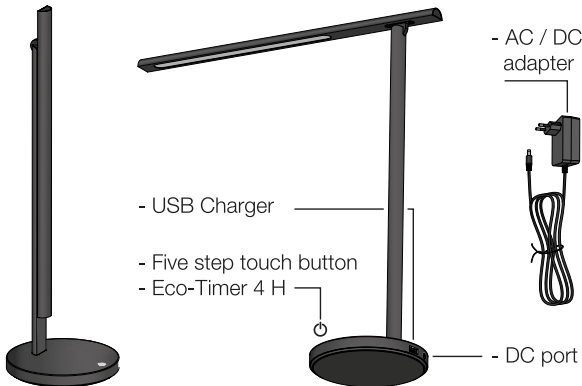

## DISPOSAL / RECYCLING



Lamp



PE-LD  
Plastic bag



CARTON  
Product box

## IMPORTANT SAFEGUARDS

To ensure that your lamp lasts, please see below recommendations.

1. Make sure that the rating label of the adapter corresponds to the power output of the usage environment.
2. Only use indoors.
3. See **CLEANING & MAINTENANCE** for the correct procedures.
4. Do not exceed 2 500 rotations of the lamp head.  
One rotation: from a lower position to an upper position, then back to a lower position, or, vice-versa.

## CLEANING & MAINTENANCE

1. Always unplug the lamp from the power supply before cleaning.
2. Wipe all surfaces with a damp cloth. DO NOT use detergents and/or abrasives, DO NOT immerse lamp in water (IP20).

## WARRANTY

- Warranty ensures that this product will operate for the period of 1 year based on an average usage of up to 8 hours per day when used in accordance with the specification and directions stated in this manual.
- If this product fails to conform to the warranty a replacement product is guaranteed upon presentation of a valid sales receipt

## PRODUCT SPECIFICATION

PART NUMBER	810-L20B (Black) ; 810-L20W (White)
Color Temp (Kelvin)	4000 ± 200 K
CRI	RA ≥ 93
Brightness (40 cm distance)	1100 / 880 / 660 / 440 / 220 Lux ±10%
Lumen	400 lm ±10
Eco-timer	4 Hours
USB Charger (Type-A)	DC 5V $\overline{\text{---}}$ 2.1A
Life time	25 000 Hours
AC / DC adapter:	AC 220~240V; DC 12V 2A, Max 24W
Power Consumption	7W Max. 24W
Weight	750 g ±1%
Operating Temperature	-10 — 40 °C

## INSTALLING FOR USE

1. Unpack and place the desk lamp on a flat surface.
2. Change the angle of the lamp head by rotating the head anywhere from 10° to 130° depending on the intended use.
3. Connect the adapter to the back of the lamp and plug the adapter into an electrical socket.
4. Turn on by lightly touching the ON/OFF symbol.

**Eco-timer:** The lamp automatically turns off after 4 hours of usage.